



COFFEE MAKER MODEL KF 5110/5210

EN



Components

- A. ON/OFF switch with power indicator light
- B. Water tank
- C. Water level indicator
- D. Hinged lid
- E. Filter holder with anti-drip valve
- F. Microwave proof coffee jug with fresh water graduation on both sides
- G. Warming plate
- H. Extendable power cord & plug
- I. Aroma button
- J. Measuring spoon
- K. Permanent filter

Safety advice

EN

Read the following instruction carefully before using the appliance for the first time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
 - the supply cord is damaged,
 - the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary an extension cable suitable for 10 A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always place the appliance on a flat, level surface.
- The appliance must be switched off and the mains plug withdrawn before cleaning and maintenance.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- The mains cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid.
- Do not exceed the maximum filling volume as indicated on the appliances.
- Do not use or place the appliance on a hot surface or near source of heat.
- Appliance is for indoor use only.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.

Getting started

EN



EN

1. Place the machine on a flat surface.
When starting the machine for the first time, fill the tank with cold water. Start the machine with the ON/OFF switch. Let a full tank of water pass through the machine once or twice to clean it, permanent filter fitted without using paper filter or coffee. The jug is microwave proof.




2. Making coffee: open the lid and fill the water tank with fresh cold water up to the desired level. There is a fresh water gauge for 2–10 big cups / 4–15 small cups in the water tank and on the coffee jug. **(The machine must not be used with empty tank!)**



3. Insert permanent filter in the filter holder and fill it with ground coffee. As an option a size 1x4 paper filter can be used instead of the permanent filter. There is a gauge for recommended number of spoons of coffee next to the water gauge. For average strong coffee 1 measuring spoon (approx. 6-7 g) per cup is sufficient. Close the water tank lid and place the jug back (complete with lid).



4. Start the machine with the ON/OFF switch. The power indicator light will come on and hot water will flow into the filter. If the machine is not turned off manually, the Safety Auto-Off function turns it off after 120 minutes.

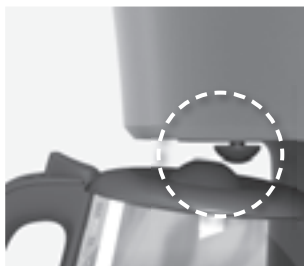

5. If the jug is removed, the filter valve prevents coffee from dripping onto the warming plate. **(While preparing coffee, the jug must not be removed for longer than 30 seconds or the filter will overflow.)**



6. The Aroma Selector extends the brewing time to maximize the flavour extraction and get a stronger coffee for a small number of cups (normally less than 6). Press the Aroma button, the light will turn on.

Cleaning and care



EN

1. **Turn the machine off and unplug the power cord.** Wipe all outer surfaces with a damp cloth. Coffee jug and jug lid are dishwasher proof. **Never use caustic or abrasive cleaners, and never immerse the machine in liquid!**



2. **To clean the permanent filter,** remove from the machine, wash with warm soapy water and rinse well with plain water.



3. **To clean the filter holder,** lift up the handle and remove the filter holder. To clean the filter valve thoroughly, push it several times while it is being rinsed. The filter holder can also be washed in the dishwasher.



4. **Decalcifying** is recommended regularly, depending on water hardness. Fill the tank with water and decalcifier according to product instructions, then follow steps 4 and 5.



5. **Place the coffee jug with its lid** onto the warming plate. Allow the decalcifier to take effect for about 15 minutes, then switch the machine on. Switch it off when the solution has finished flowing through. If necessary repeat the decalcifying process.



6. **Allow the machine to run at least twice with plain water.** Then thoroughly rinse the coffee jug, lid and filter holder under running water, activate the filter valve repeatedly during the rinse process.

Disposal

EN


Disposal

Packaging materials

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose the packaging materials in the appropriate container at the community waste disposal facilities.

Old appliance



The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you

will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

EN



WARRANTY

Electrolux South Africa (Pty) Ltd., ('Electrolux') warrants to the original purchaser ('the Purchaser') that this appliance is free from defects in the material or workmanship under normal use and service subject to the following conditions:

This AEG Product is covered by Electrolux Warranty Conditions

1. This warranty, remains valid for a period of one year in respect of appliances used for domestic purposes only. Any AEG domestic appliance used in a commercial capacity will not be covered by this warranty.
2. The Purchaser shall refer the appliance for repair to any AEG branch or AEG authorized service agent and nowhere else. On referral for repair in accordance with the warranty as aforesaid Electrolux shall, at its opinion, if satisfied that the conditions herein set out have been complied with, replace or repair the appliance without cost to the Purchaser.
3. The Purchaser shall use only genuine AEG accessories.
4. This warranty does not apply to light bulbs, external electrical connections, flex and all other items where the length of life depends upon the use and care given.
5. This warranty shall only apply to appliances purchased in and retained for use in South Africa, Namibia, Lesotho, Botswana and Swaziland.
6. The Purchaser shall not remove the serial number of the appliance.
7. Electrolux undertakes that all goods supplied by it shall conform to the specifications of the same except insofar as these are necessarily modified by AEG from time to time. Electrolux does not warrant or give any representation of any nature in respect of any appliances supplied by it or the materials from which those appliances were made, or the workmanship in the making of those appliances or the fitness of those appliances for any particular purpose whether or not that purpose is known to Electrolux.
8. Electrolux shall not be responsible for any loss or damage of any nature whatsoever whether direct or indirect, consequential or otherwise, sustained as a result of any appliance being defective or not conforming to the description thereof, or as a result of improper use of the appliance (which, without limiting the generality thereof, shall include the use of incorrect voltage or faults in the house wiring, improper use of the controls and failure to use the appliance in accordance with the operating instructions), or as a result of any other cause whatsoever.
9. Abuse of the appliance by the purchaser will render this warranty invalid. Improper use of the appliance and failure to use the appliance or maintain the appliance in accordance with the relevant instructions will be considered as abuse.
10. The purchaser shall, when referring the appliance for warranty repair as aforesaid, produce the cash slip, hire purchase documents or invoice together with this warranty.
11. Electrolux shall be entitled to charge the Purchaser for services rendered outside the warranty period or for any quotations given when no fault is found, for any replacement parts supplied and which are not covered by the warranty.
12. The above conditions constitute separate and devisable resolute conditions and failure of the Purchaser to observe each or any of the said conditions will render this warranty of no force and effect.
13. No understandings or representations, which are not in writing and accepted by Electrolux or specified in writing, are binding on it.
14. All implied warranties in respect of the appliance are expressly excluded.



ELECTROLUX FLOORCARE & SMALL APPLIANCE DIVISION
A DIVISION OF ELECTROLUX S.A. (PTY) LTD
Reg. no. 1971/005541/07

CUSTOMER HELPLINE: 0800 222 825 (Toll Free South Africa wide)

Web: www.aeg-electrolux.co.za

IMPORTANT!

For future reference we suggest you record the following details here, and keep the receipt with the handbook as proof of purchase.

PURCHASED FROM:

DATE PURCHASED:MODEL NO:.....

SERIAL NO.



Share more of our thinking at www.aeg.com