

START



Accessories required:

CLEANING TABLETS
MICRO FIBRE CLOTH
CLEANING BRUSH



Press **CLEAN** for 3 seconds.
SPECTRA X changes to cleaning mode.



WARNING
Danger of scalding!

Danger from hot water.
Do not touch the outlets.



Press **+**.
The **REMAINING SUPPLY** is discharged through the **OUTLET**.



Press **-**.
The **REMAINING SUPPLY** is discharged through the **DRAIN TUBE**.

continue with 03



Open the **GROUND** DOOR.




Empty and wash out **COFFEE GROUND** CONTAINER.



Clean interior chamber using the brush.
Insert the **COFFEE GROUND** CONTAINER and close the **DOOR**.




Open **COFFEE POWDER CHUTE** and place in a **CLEANING TABLET**.

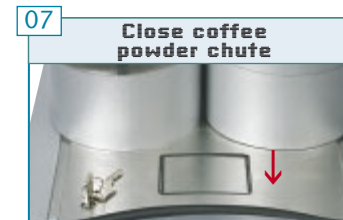

Close **COFFEE POWDER CHUTE**. Press **CLEAN**.
Outlet moves to the cleaning position.

continue with 08

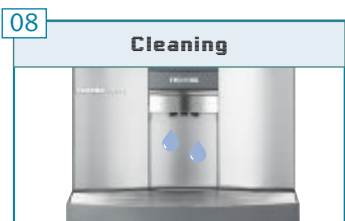

The **SPECTRA X** cleans the **COFFEE SYSTEM**.



Automatic cleaning is finished.
The outlet moves up.



Clean the **DRIP GRID** and the **DRIP TRAYS**.
Clean coffee outlet as required.
See page 26 of the operating instructions



Clean the **Spectra X** and add-on units with a damp microfiber cloth. Do not use scouring agents.