




Water flow diagram CG6600

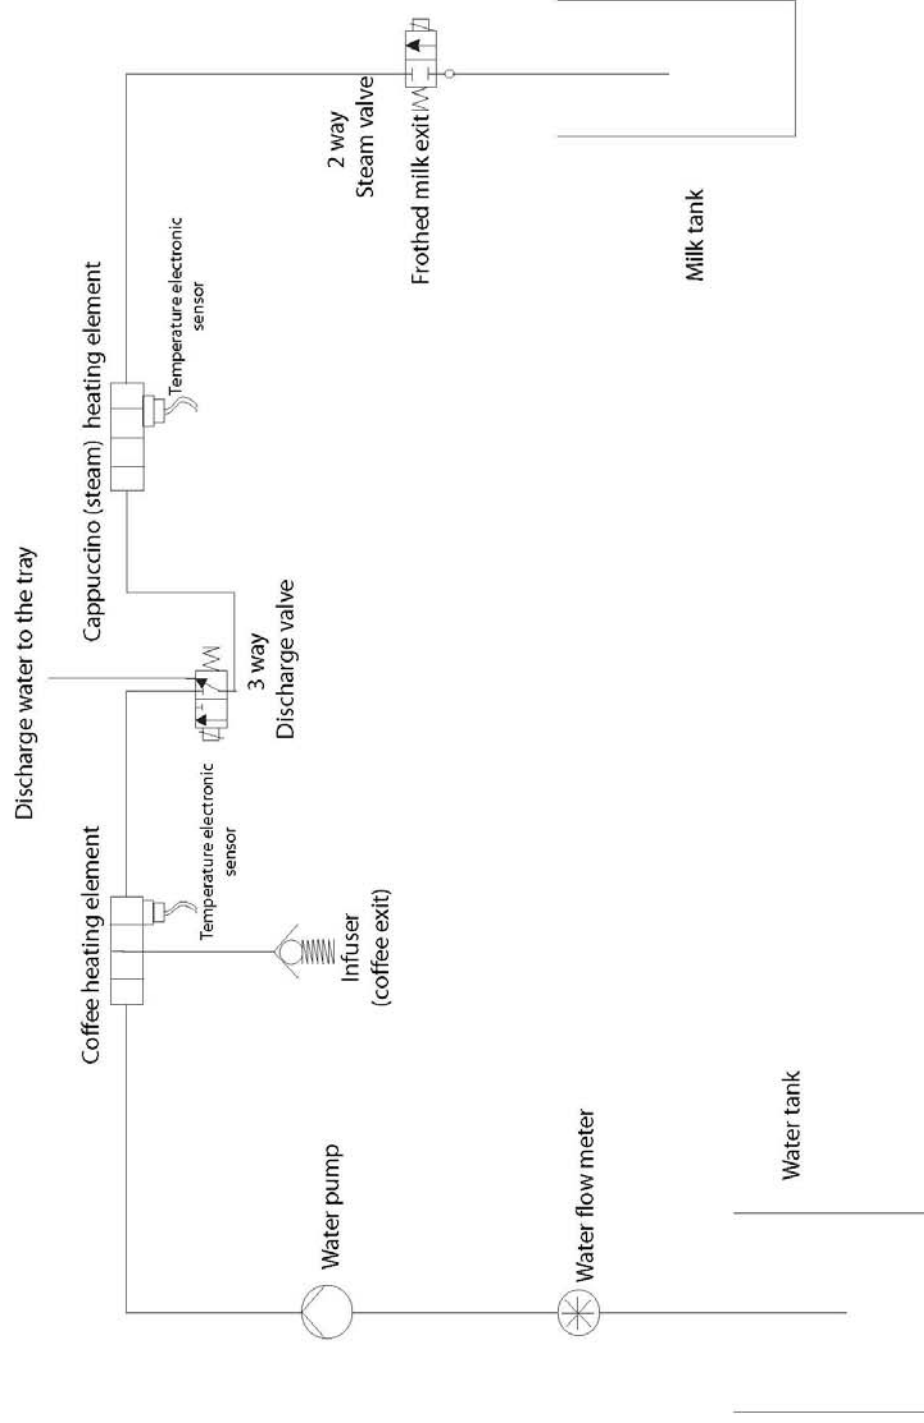

KAFFEEVOLLAUTOMAT
MACCHINA DA CAFFÈ AUTOMATICA
AUTOMATIC COFFEE MACHINE

AEG CG6600

(INT)


TECHNISCHE DATEN / DATA TECNICI / TECHNICAL DATA

Spannung / Voltaggio / Voltage	V / Hz 230 - 240 / 50 - 60
Max. Aufnahmeleistung / Max. potenza assorbita / Max. input power	W 1350
SEKTION KAFFEE / SEZIONE CAFFÈ / COFFEE SECTION	
Temperaturwerte / Sonda termica / Temperature probe	°C 98 (Caffè / Coffee) °C 98 (Acqua calda / Hot water)
Thermosicherung TCO / Fusibile termico / Thermal fuse FS	°C 192
Heizelement / Resistenza riscaldamento / Heating element	W 600 + 600
Pumpe / Pompa / Pump	TYPE / W ULKA EP5 / 48


DAMPF SEKTION / SEZIONE VAPORE / STEAM SECTION

Temperaturwerte / Sonda termica / Temperature probe	°C 145 (Vapore / Steam)
Thermo-Sicherung TCO / Fusibile termico / Thermal fuse	°C 318
Heizelement / Resistenza riscaldamento / Heating element	W 1000

SCHEMA ELETTRICO / ELECTRICAL DIAGRAM

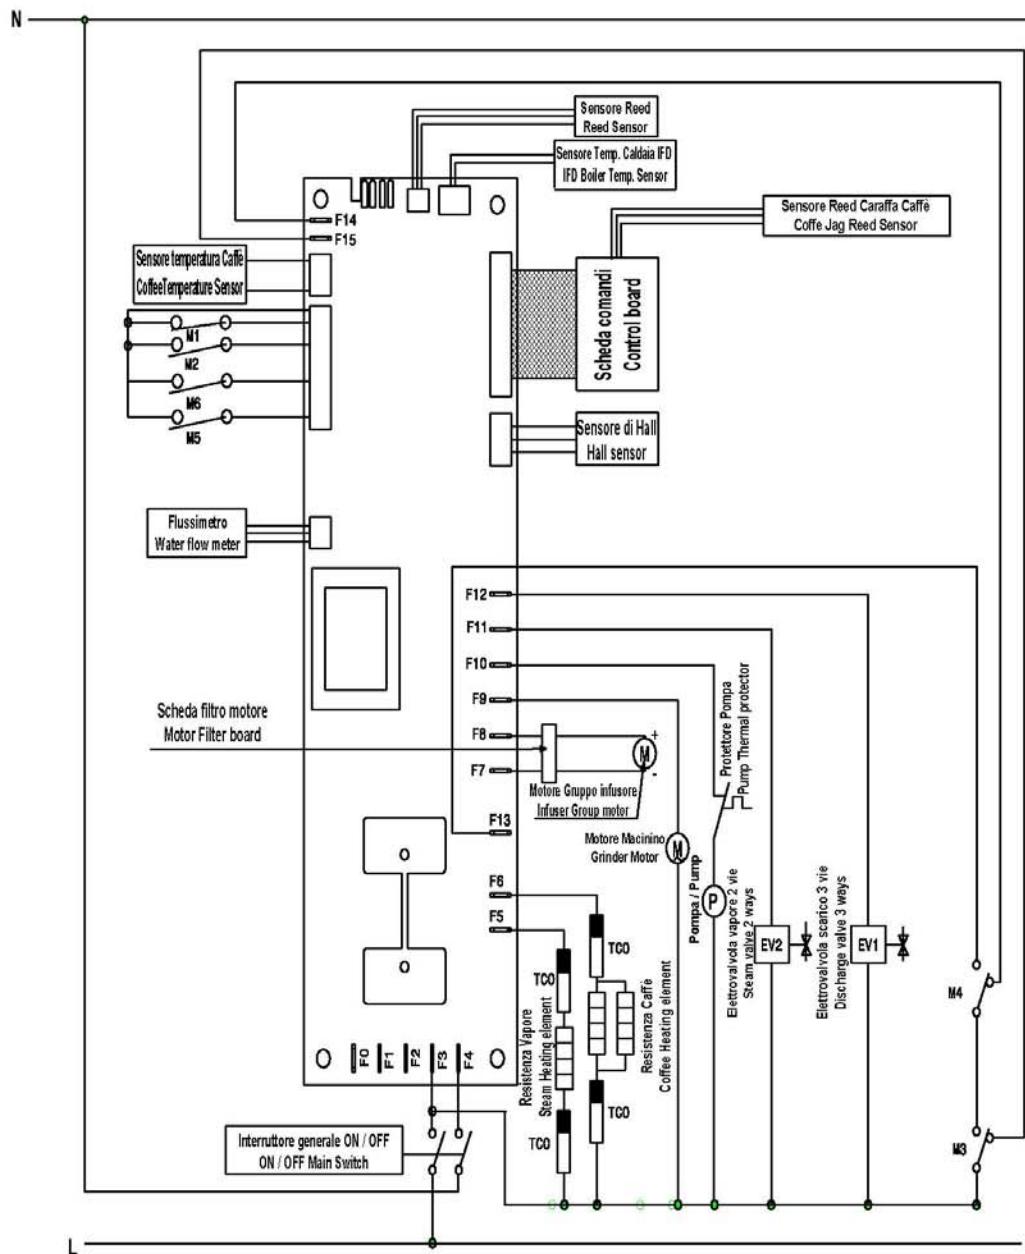


SCHEMA ELETTRICO / ELECTRICAL DIAGRAM

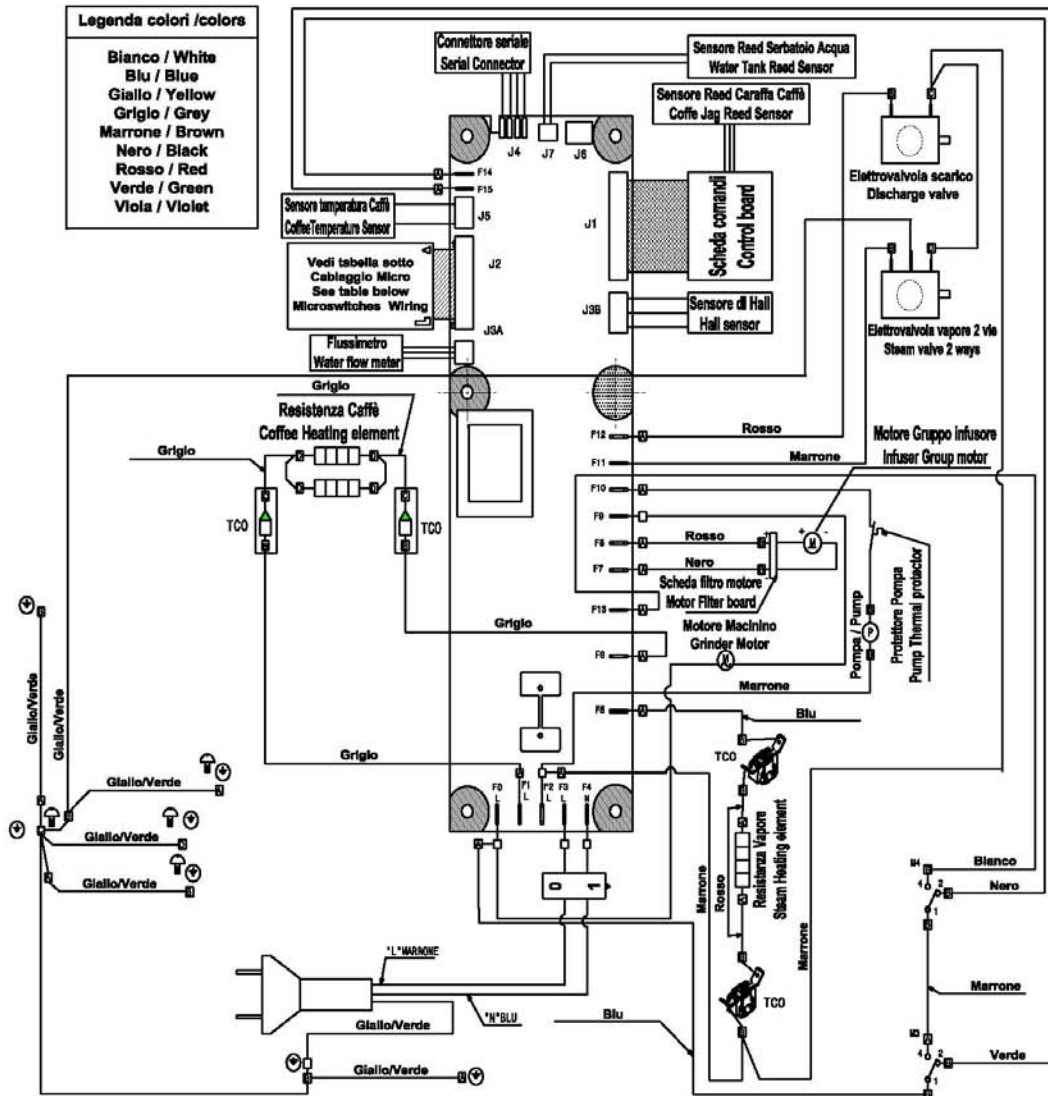

Legenda Micro / Microswitches	
M1	Infusore alto / Infuser top position
M2	Infusore basso / Infuser bottom position
M3	Cassetto fondi / Coffee grounds container
M4	Portina Service / Service Door
M5	Rubinetto acqua calda / vapore / Hot Water / Steam tap

Interruttore generale ON / OFF
ON / OFF Main Switch

Cablaggio Micro / Microswitches Wiring

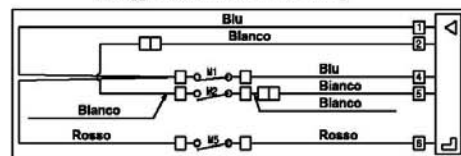

AEG

 Electrolux

TEST PROCEDURE AEG GC 6600



TEST PROCEDURE

To enter the **test procedure**, press and hold one cup + "Menu" buttons, then plug the machine on.

Now you can check the devices one by one pressing the following buttons:

- "1 Cup": Heater ON (check with the amperometer);
- "2 Cups": Grinder on,
- "Steam ": Pump ON;
- "Menu": Vaporizer ON (check with the amperometer);
- "ON/OFF": Motor down;
- "ON/OFF+": Motor up;
- "Menu"
- "JUG": EV1 ON(solenoid valves)
EV2 ON.

DISPLAY TEST MODE

To enter the **display test mode**, press and hold "2 Cups" + "Menu" buttons, then plug the machine on. Pressing each button, the display will show a different number, to show the buttons are working.

To exit the procedures, unplug the machine.
